

Installation for LED Bay Lighting

1. Working Voltage: AC 90V~ 295V 47-63Hz, LED bay lights work under the standard operating voltage which shall not exceed the operating voltage and frequency range.

2. Since LED bay lights contain glass parts, please do not stress or drop heavily during the handling, storage and installation process.


3. According to the installation location of lamps, pre-installed hanging hook shall be prepared.

4. Set the LED bay light into the mounting bracket, screw the hanging ring tightly, the hanging ring is an M20 screw thread, put the hanging ring in to the hanging hook and adjust the lamp at a horizontal angle. When installing the lamp, all wiring connections should be sealed properly to prevent electricity leakage.

5. Proper waterproof and water leakage proof measures shall be taken when connecting the lamp to external power cords.

6. Use of the lamp shall not violate any laws which are relevant to fireproof.

7. The installation shall only be operated by the qualified electricians. Wiring Methods for the three-core 0.75-1 square millimeter electric cable shall be as follows: the red wire shall be connected with live line, the blue wire shall be connected with null line, and the yellow wire shall be connected with earth line.

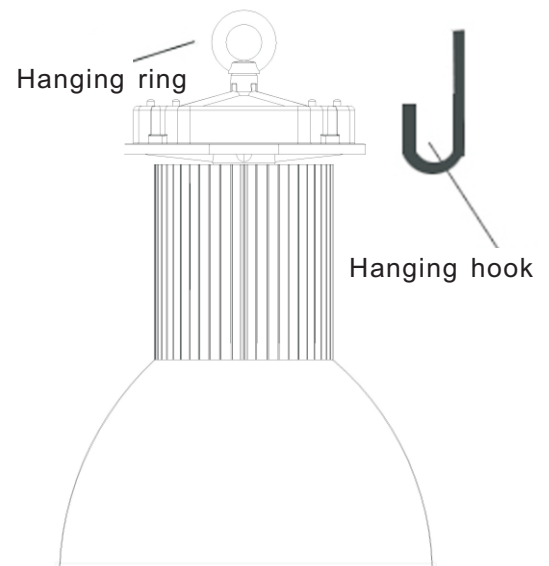

▶ Contact us

Phone: 86-755-3366-2660 (English Service)

Fax: 86-755-3366-2986

Website: www.fobsun.com

Email: sales@fobsun.com